

Dishwashing Protocol:

1. Press **DOOR UP** ↑
2. Load dishes – make sure that they are secure so that they don't get misplaced during wash. Small items are placed in metal boxes, and topped with cage.
3. Press **DOOR DOWN** ↓
4. Choose Medium wash cycle
5. Press **Run/Pause** (the green button)
6. Allow dishwasher to flush **and** drain
7. When dishwasher says **Wait**, press **Run/Pause**
8. Press **DOOR UP** ↑
9. Add approximately a capful of soap on each side of the dishwasher
10. Press **DOOR DOWN** ↓
11. Press **Run/Pause**
12. Allow dishwasher to heat, rinse, etc. It will take about 25 minutes.

If anything goes wrong press **Stop/Cancel** (the red button)

If the dishwasher appears to be broken call facilities at 3-4567

Large glassware and plasticware: Air dry on clean diaper in dish cart.
When dry, top with foil and shelve.

Small glassware: Top with foil first, put in metal bins, and bake overnight in 100°C oven. Remove, let cool, and then shelve.

Thanks! :-)